

REPORTS - MELBOURNE (continued)**REPORTS - WESTERN PORT****DEPARTURE REPORTS****1 hour before departure**

TO: HARBOUR CONTROL
 GIVING: IMO SRS ITEMS:
 Alpha Bravo X-ray
 VIA: VHF CH 12

On departure

TO: HARBOUR CONTROL
 GIVING: IMO SRS ITEMS:
 Alpha Bravo (ETA
 at Hovell Pile Light or
 West Channel Pile
 Light and at Port Phillip
 Heads)
 VIA: VHF CH 12

During passage

TO: PT LONSDALE
 SIGNAL STATION
 GIVING: IMO SRS ITEMS:
 Alpha Delta (change in
 ETA)
 VIA: VHF CH 12

MOVEMENT REPORTS

AT: West Gate Bridge,
 Breakwater Pier,
 Fawkner Beacon,
 anchorage (if
 applicable)

TO: HARBOUR
 CONTROL

GIVING: IMO SRS ITEMS:
 Alpha Delta
 VIA: VHF CH 12

NOTE:**Outward bound tanker
 through Port Phillip Heads:**

- as per pre-entry requirements
 (See MEL 1)
- must whilst in the waters of
 Port of Port Phillip display the
 signal/s for vessels carrying
 dangerous goods
- must upon arrival at No 5
 buoy, South Channel, advise
 Point Lonsdale Signal Station
 of readiness to proceed
- must not proceed westward of
 West Channel leading line
 until Signal Station grants
 permission

PRE-ENTRY REPORTS**1 hour before arrival Pilot Boarding grounds or Fairway Buoy**

TO: STONY POINT
 GIVING: IMO SRS ITEMS: Alpha Charlie or Delta Oscar X-ray
 VIA: VHF CH 14

DURING PASSAGE

AT: Fairway Buoy, Sandy Point, on berthing or anchoring
 TO: STONY POINT
 GIVING: IMO SRS ITEMS: Alpha Delta
 VIA: VHF CH 14

DEPARTURE REPORTS**1 hour before Departure**

TO: STONY POINT
 GIVING: IMO SRS ITEMS: Alpha Bravo X-ray
 VIA: VHF CH 14

MOVEMENT REPORTS

AT: Leaving berth, Sandy Point, clear of VTS area
 TO: STONY POINT
 GIVING: IMO SRS ITEMS: Alpha Delta
 VIA: VHF CH 14