

TRAFFIC SIGNAL STATIONS AND REGULATIONS

1. The Traffic Signal Stations of YOKOHAMA Passage

- (1) Honmoku Signal Station: 35°26'21"N, 139°41'22"E
- (2) Naiko Signal Station: 35°26'53"N, 139°38'43"E
- (3) Daikoku Signal Station: 35°28'25"N, 139°40'04"E

2. Meaning of Signals for YOKOHAMA Passage

Meaning of letters, "I", "O", "F", "X" on Honmoku, Naiko and Daikoku Signal Stations are as follows;

- (1) **Flashing I**: Inbound vessels of 160m and over in length (as for oil tankers, 1,000 GRT and over) may enter the Passage. Vessels of 50m and over in length (except vessels less than 500 GRT) shall wait outside the Passage.
- (2) **Flashing O**: Outbound vessels of 160m and over in length (as for oil tankers, 1,000 GRT and over) may leave the Passage. Vessels of 50m and over in length (except vessels less than 500 GRT) shall wait outside the Passage.
- (3) **Flashing F**: All of vessels less than 160m in length (as for oil tankers less than 1,000 GRT) may enter or leave the Passage. Other vessels shall wait outside the Passage.
- (4) **Alternating X and I or O or F**: Advanced notice of Traffic Signals, shortly after.
- (5) **Continuous X**: Entering and leaving through the Passage is prohibited to all vessels except one who has special permission from the Captain of the Port.
- (6) **Flashing X**: Advance notice of the signals as continuous lighting X, shortly after.

3. The Traffic Signals Stations of TSURUMI Passage

- (1) Tsurumi Signal Station: 35°28'44"N, 139°42'02"E
- (2) No.2 Turumi Signal Station: 35°27'53"N, 139°42'47"E

4. Meaning of Signals for TSURUMI Passage

Meaning of letters, "I", "O", "X" on TSURUMI and TSURUMI No.2 Signal Stations are as follows:

- (1) Flashing I: Inbound vessels of 1,000 GRT and over may enter the Passage. Outbound vessels of 1,000 GRT and over shall wait outside the Passage. (Except vessels less than 1,000 GRT);
- (2) Flashing O: Outbound vessels of 1,000 GRT and over may leave the Passage. Inbound vessels of 1,000 GRT and over shall wait outside the Passage. (Except vessels less than 1,000 GRT);
- (3) Flashing X: Vessels inside of TSURUMI North Passage may continue entering or leaving the Passage. Other inbound or outbound vessels shall wait outside the Passage except outbound vessels from First KEIHIN Canal;
- (4) Continuous X: Entering and leaving through the Passage is prohibited to all vessels except a vessel who has special permission from the Captain of the Port.